


INSTALLATION INSTRUCTION OF KIT STAGE 3 SYNERJECT MASH 400cc


Kit contents :

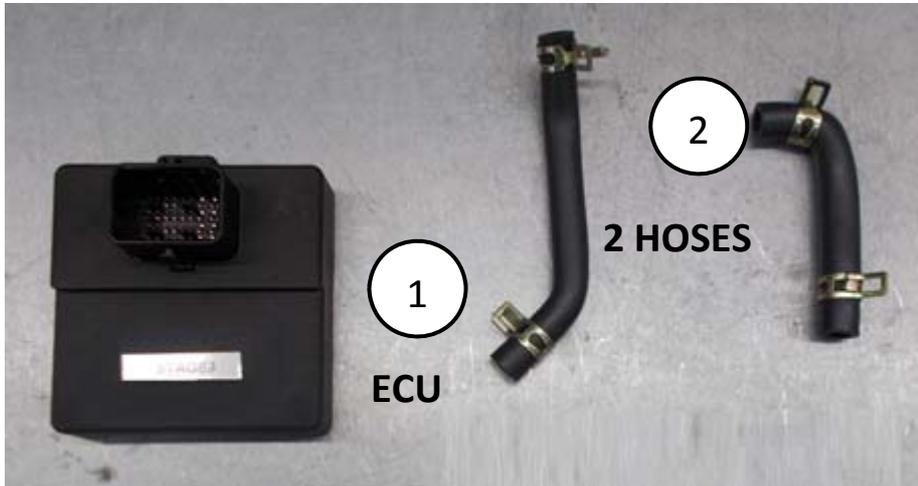

1) Proceed with the replacement of the ECU of the bike.

2) The new ECU has a mapping with optimized settings that do not require the installation of the bypass kit.

Therefore (ONLY) if your bike is fitted with the bypass kit, please remove it and put the hoses provided :

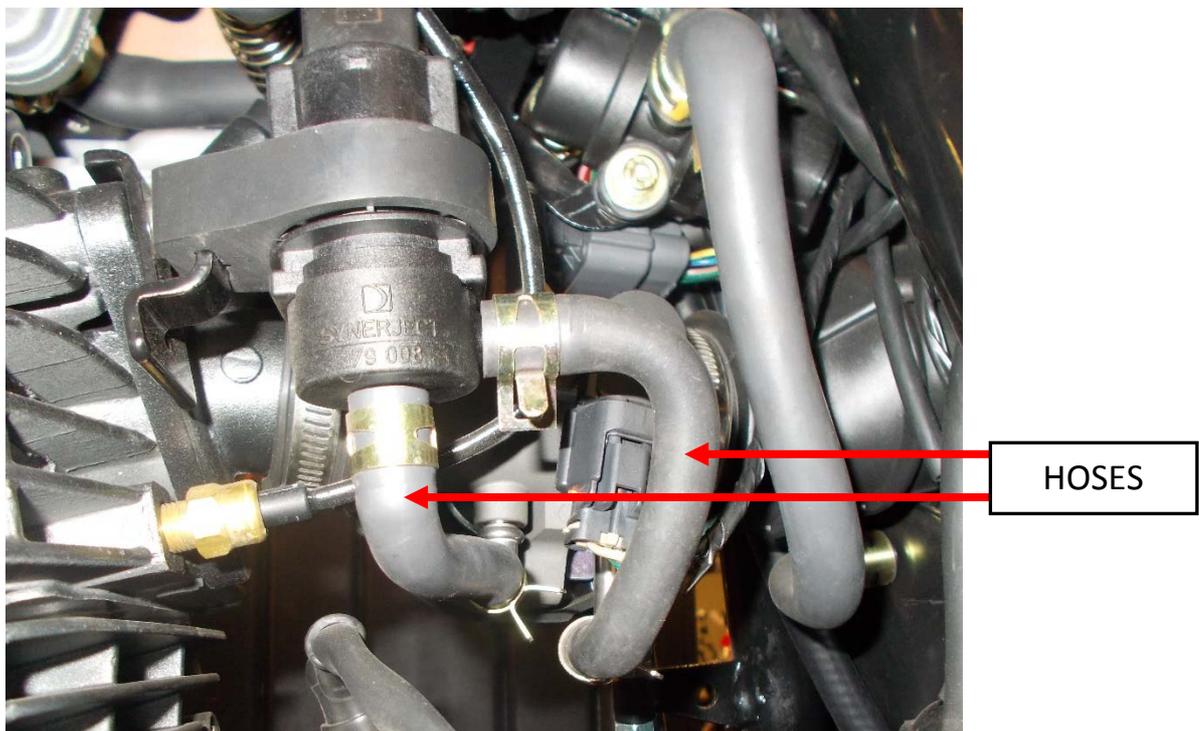

IMPORTANT : ECU INITIALIZATION

Before to start the bike, please proceed the ECU initialization :

- turn the ignition key to the "ON" position
- wait until the fuel pump stops
- turn the ignition key to the "OFF" position and wait 10sec.

Repeat the above written procedure exactly 20 times in total.



REMINDER : Valves clearance (0,15 IN/0,15 EX)